


G&D DP1.2-MUX3-ATC

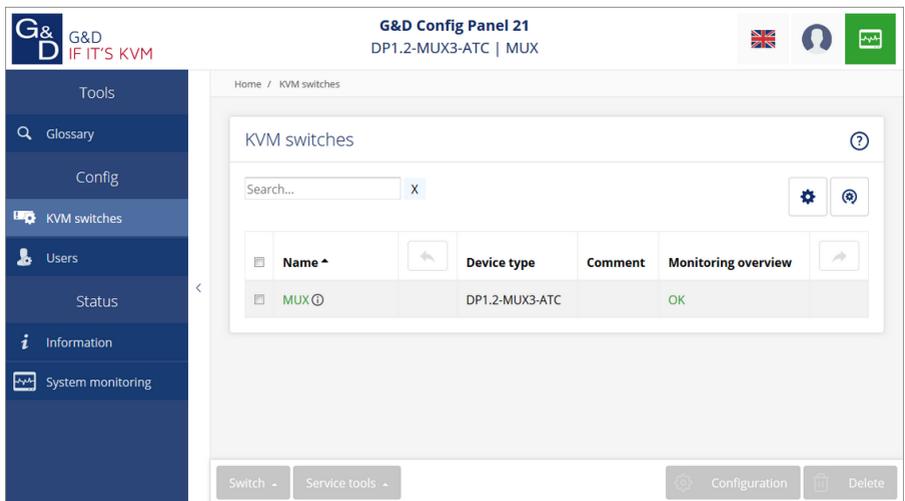

EN

Web Application »Config Panel«
Configuring the KVM switch

About this manual

This manual has been carefully compiled and examined to the state-of-the-art.

G&D neither explicitly nor implicitly takes guarantee or responsibility for the quality, efficiency and marketability of the product when used for a certain purpose that differs from the scope of service covered by this manual.

For damages which directly or indirectly result from the use of this manual as well as for incidental damages or consequential damages, G&D is liable only in cases of intent or gross negligence.

Caveat Emptor

G&D will not provide warranty for devices that:

- Are not used as intended.
- Are repaired or modified by unauthorized personnel.
- Show severe external damages that was not reported on the receipt of goods.
- Have been damaged by non G&D accessories.

G&D will not be liable for any consequential damages that could occur from using the products.

Proof of trademark

All product and company names mentioned in this manual, and other documents you have received alongside your G&D product, are trademarks or registered trademarks of the holder of rights.

Imprint

© Guntermann & Drunck GmbH 2018. All rights reserved.

Version 1.00 – 23/03/2018

Version: 1.0.000

Guntermann & Drunck GmbH

Obere Leimbach 9

57074 Siegen

Germany

Phone +49 271 23872-0

Fax +49 271 23872-120

<http://www.gdsys.de>

sales@gdsys.de

Table of contents

System requirements	5
Supported operating systems	5
Recommended resolutions	5
Initial configuration of the network settings	6
Getting started	7
Starting the web application	7
Operating the web application	8
User interface	8
Frequently used buttons	10
Configuring table columns	10
Selecting the language of the web application	12
Closing the web application	12
Showing the version number of the web application	12
Channel switching via EasyControl	13
Starting the switching tool »EasyControl«	13
Switching the active KVM channel	14
Changing the colour scheme of the switching tool	15
Renaming KVM channels	15
Closing the »EasyControl« switching tool	15
Basic configuration of the web application	16
Network settings	16
Configuring the network interfaces	16
Configuring global network settings	17
Increasing the reliability of network connections by link aggregation	18
Reading out the status of the network interfaces	21
Creating and administrating netfilter rules	22
Creating new netfilter rules	22
Editing existing netfilter rules	23
Deleting existing netfilter rules	25
Changing the order or priority of existing netfilter rules	25
Creating an SSL certificate	26
Special features for complex KVM systems	26
Creating a Certificate Authority	26
Creating any certificate	28
Creating and signing an X509 certificate	29
Creating a PEM file	29
Selecting an SSL certificate	29
Firmware update	31
Restoring the system defaults	31
Restarting the KVM switch	32

Network functions of the devices	33
NTP server	33
Time sync with an NTP server	33
Manual setting of time and date	34
Logging syslog messages	35
Local logging of syslog messages.....	35
Sending syslog messages to a server	36
Viewing and saving local syslog messages	37
User authentication with directory services	37
Monitoring functions	40
Viewing all monitoring values	40
Enabling/disabling monitoring values	41
Advanced features for managing critical devices	42
Displaying the list of critical monitoring values	42
Acknowledging the alarm of a critical device	42
Monitoring devices via SNMP	43
Practical use of the SNMP protocol	43
Configuring an SNMP agent	43
Configuring SNMP traps	46
Users and groups	48
Creating a new user account	48
Renaming a user account	49
Changing the password of a user account	49
Enabling or disabling a user account	49
Deleting a user account	50
System rights	50
Rights for unrestricted access to the system (Superuser)	50
Changing the login right to the web application	51
Rights to change your own password	51
Advanced functions of the KVM system	52
Temporarily (de)activating SNMP traps (Maintenance mode)	52
(De)activating the maintenance mode	52
Viewing a list of devices in maintenance mode	52
Identifying a device by activating the Identification LED	52
Saving and restoring the data of the KVM system	53
Basic configuration of KVM switches	54
Changing the name of a KVM switch	54
Changing the comment of a KVM switch	54
Deleting a KVM switch from the KVM system	55

Configuration settings of KVM switches	55
Device configuration	55
Changing the hotkey to open the OSD	55
Starting the on-screen display by pressing a key twice	56
Changing the select keys	57
Selecting step keys	58
Configuring the scantime of the Autoscan or Autoskip function	59
Auto-switching to a channel after the start-up	60
Enabling/disabling switching	60
Changing the scancode sets of a PS/2 keyboard	61
Enabling/disabling DDC/CI support	62
OSD configuration	63
Enabling/disabling the use of the on-screen display	63
Enable/disable an automatic OSD timeout	63
Setting the OSD resolution	64
Selecting the keyboard layout for inputs on the on-screen display	64
Adjusting the transparency of the on-screen display	65
Displaying an information overlay	66
Changing the colour of the information overlay	66
Channel configuration	67
Changing the channel name	67
Changing the comment of a KVM switch	67
Enabling/disabling a channel	68
Enabling/disabling the keyboard signal	68
Support for multimedia and other special keys	69
Video channel configuration	70
Changing the name of a video channel	70
Changing the comment of a video channel	70
Reading the EDID profile of a monitor	71
Defining the EDID profile of a channel	72
Use of the Freeze mode	73
Advanced features for KVM switches	74
Switching between channels	74
Configuring monitoring values	75
Selecting the values to be monitored	75
Viewing the status information of a KVM switch	76

1 Basic functions

The *ConfigPanel* web application provides a graphical user interface to configure the matrix switches of the KVM system. The application can be operated from any supported web browser (see page 5).

ADVICE: The web application can be used in the entire network independently from the locations of the devices and consoles connected to the KVM system.

Thanks to its enhanced functions, the graphical user interface provides the following features for easy operation:

- Clearly arranged user interface
- Monitoring of various system features
- Advanced network functions (netfilter, syslog, ...)
- Backup and restore function

System requirements

IMPORTANT: Before the web application can be started via the web browser of a computer, the device from which the web application is loaded must first be connected to the local network (see installation instructions).

If not already done, adjust the network settings described on page 6.

The web application *ConfigPanel* has been successfully tested with these web browsers:

- Apple Safari 11
- Google Chrome 64
- Internet Explorer 11
- Microsoft Edge 41
- Mozilla Firefox 58

Supported operating systems

- Microsoft Windows
- macOS
- Linux
- Android
- iOS

Recommended resolutions

- A minimum resolution of 1366×768 pixels is recommended.
- The web application is optimized to display the content in landscape mode.
- Portrait mode is supported. In this mode, not all contents may be visible.

Initial configuration of the network settings

NOTE: In the defaults, the following settings are pre-selected:

- IP address of *network interface A*: **192.168.0.1**
- IP address of *network interface B*: address obtained using **DHCP**
- global network settings: settings obtained using **DHCP**

To access the web application, the network settings of the device on which the web application is operated need to be configured.

ADVICE: As an alternative to the steps described below, the initial configuration of the network interfaces of the KVM switch can be carried out via on-screen display.

How to configure the network settings before integrating the device into the local network:

1. Use a category 5 (or better) twisted pair cable to connect the network interface of any computer to the device's *Network A* interface.
2. Ensure that the IP address of the computer's network interface is part of the subnet to which the device's IP address belongs to.

NOTE: Use the IP address *192.168.0.100*, for example.

3. Switch on the device.
4. Start the computer's web browser and enter **192.168.0.1** in the address bar.
5. Configure the network interface(s) and the global network settings as described in the paragraph *Network settings* on page 16 f.

IMPORTANT: It is not possible to operate both network interfaces within one subnet!

6. Remove the twisted pair cable connection between computer and device.
7. Implement the device in the local network.

Getting started

This chapter introduces you to the basic operation of the web application.

NOTE: For a detailed explanation of the functions and configuration settings, refer to the following chapters of this manual.

Starting the web application

NOTE: Information on the system requirements of the web application can be found on page 5.

How to start the web application

1. Enter the following URL in the address line:

https://[IP address of the device]

2. Enter the following data in the login mask:

Username:	Enter a username.
Password:	Enter a password for your user account.

IMPORTANT: Change the administrator account's default password.

To do this, log into the web application with the administrator account and then change the password (see page 49).

The *default* access data to the administrator account are:

- **Username:** Admin
- **Password:** 4658

3. Click on **Login**.
4. Click on the **Config Panel 21** icon.

NOTE: As an alternative to the **Config Panel 21** you can open the **EasyControl** (see page 13) tool after login.

Operating the web application

User interface

The user interface of the web application consists of several areas:

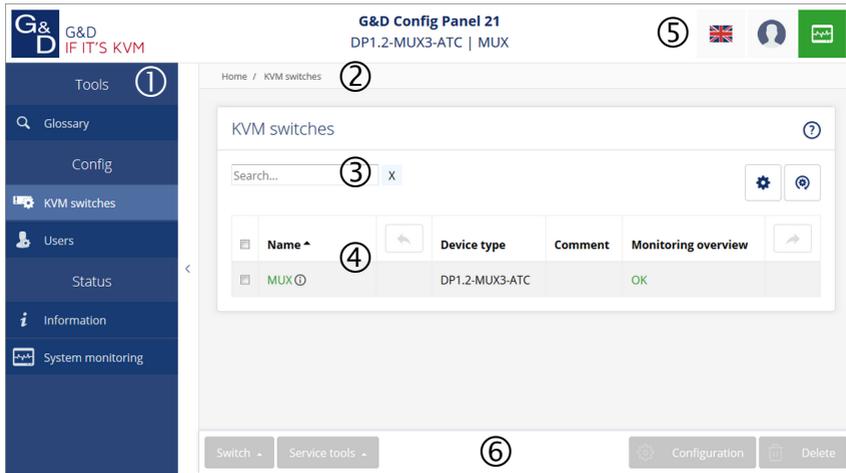


Figure 1: User interface of the web application

The different areas of the user interface serve different tasks. The following table lists the purpose of each area:

Menu ①:	In the menu the different functions of the web application are summarised in various topics.
Breadcrumb navigation ②:	The breadcrumb navigation shows you the path to the currently opened dialog. To quickly return to a higher-level dialog, you can click on it in the breadcrumb navigation.
Filter function ③:	You can use the filter function to narrow down the items displayed in the main view. In the text box, enter part of the name of the element you want to find. Only elements that contain this text in one of the <i>displayed</i> columns are displayed in the main view. The names are not case-sensitive during filtering. To delete the filter, click on the [X] icon.
Main view ④:	After selecting a topic in the menu, the contents of this topic are displayed here.

Shortcuts ⓘ:

Language selection: The country flag shows the language currently active in the web application.

Click on the country flag to switch between languages (*German/English*). A submenu opens displaying all supported languages in the form of flags. Switch the language by clicking on the desired flag.

User: A click on the user icon opens a submenu:

- The name of the active user is displayed in the submenu.
- Click on *User* to access the user settings of the active user.
- Click on *Logout* to exit the active session.

Monitoring status: This icon shows you at a glance whether all monitoring values are within the normal range (green icon) or if at least one monitoring value is outside the normal range (yellow or red icon).

The *Monitoring status* icon always takes the colour of the *most critical* monitoring value

If the icon is displayed in yellow or red, you can access the *Active alarms* dialog by clicking on the icon.

Buttons ⓘ:

Depending on the dialog shown, different buttons are displayed in this area.

Frequently used buttons

The user interface uses various buttons to perform operations. The following table informs you about the names and functions of the buttons used in many dialog masks:

Configuration:	Show configuration settings of the selected element (device, user, ...)
Switch:	When selecting a KVM switch in the main view, you can use this submenu to switch the active KVM channel.
Service tools:	If you select a device in the main view, you can use the service tools to perform certain tasks (for example, update, backup, show syslog).
Save:	Saving of the entered data. The opened dialog is still displayed.
Cancel:	The data you have entered will be discarded and the dialog will be closed.
Close:	The entered data is cached and the dialog is closed. Only after clicking on Save or Cancel the data is permanently stored or discarded.

Configuring table columns

You can adapt the table columns to be displayed under **KVM switches** and **Users** to your requirements.

By default, the columns *Name*, *Device type*, *Comment* and *Monitoring overview* are shown under **KVM switches**:

The screenshot shows a web interface titled "KVM switches" with a search bar and two icons (gear and refresh). Below is a table with the following structure:

<input type="checkbox"/>	Name ^	<input type="button" value="↶"/>	Device type	Comment	Monitoring overview	<input type="button" value="↷"/>
<input type="checkbox"/>	MUX <input type="button" value="↶"/>		DP1.2-MUX3-ATC		OK	<input type="button" value="↷"/>

Figure 2: Table columns (default) of a KVM switch

How to change the columns to be displayed:

NOTE: The **Name** column is *always* shown as the first column of the table.

1. Click on the gears icon (⚙️) above the table.

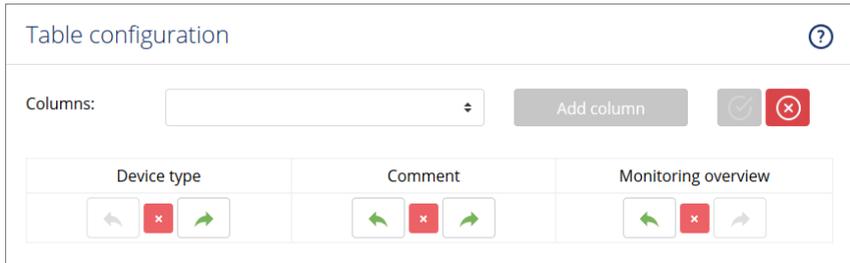


Figure 3: Table configuration

2. To add a column, select it from the **Columns** drop-down box and click on **Add column**.
3. To delete a column, click on the red button (✖️) below the column header.
4. Click on the green **check mark** (✅) to save your settings or click on the red **Discard** button (🚫).

How to change the column order:

NOTE: The **Name** column is *always* shown as the first column of the table.

1. Click on the gears icon above the table.
2. To move a column to the left, click on the **arrow left** icon (⬅️) of this column.
3. To move a column to the right, click on the **arrow right** icon (➡️) of this column.
4. Click on the green **check mark** (✅) to save your settings or click on the red **Discard** button (🚫).

How to reset the table configuration to the default settings

1. Click on the **Table configuration reset** icon (🔄) above the table.
2. Confirm the security prompt by clicking on **Yes**.

Selecting the language of the web application

NOTE: The selected language is saved in the user settings of the active user. The next time this user logs on, the previously selected language setting is applied.

How to change the default language of the web application:

1. Click on the **country flag** at the top right.

A submenu opens displaying all supported languages in the form of flags.

2. Change the language by clicking on the desired **flag**.



Closing the web application

Use the *Close* button to end the active session of the web application.

IMPORTANT: To protect the web application against unauthorised access, always use the *Logout* function after finishing your work with the web application.

How to close the web application:

1. Click on the **user icon** at the top right.
2. Click on **Logout** to exit the active session.



Showing the version number of the web application

How to show the version number of the web application:

1. In the menu, click on **Information**.
2. The **General** tab provides you with information about the *ConfigPanel* version.

Channel switching via EasyControl

You can use the integrated switching tool **EasyControl** to visualise the connected channel and to allow fast switching (also via touch screen device).

All users with the **Config Panel Login** right (see page 51) can use the switching tool.

Starting the switching tool »EasyControl«

How to start the switching tool:

1. Enter the following URL in the address line:

https://[IP address of the device]

2. Enter the following data in the login mask:

Username:	Enter a username.
Password:	Enter a password for your user account.

IMPORTANT: Change the administrator account's default password.

To do this, log into the web application with the administrator account and then change the password (see page 49).

The *default* access data to the administrator account are:

- **Username:** Admin
- **Password:** 4658

3. Click on **Login**.
4. Click on the **EasyControl** icon.

Switching the active KVM channel

The user interface consists of three buttons for switching between the three channels of the KVM switch.

When using the default colour scheme, a green frame indicates the currently active channel.

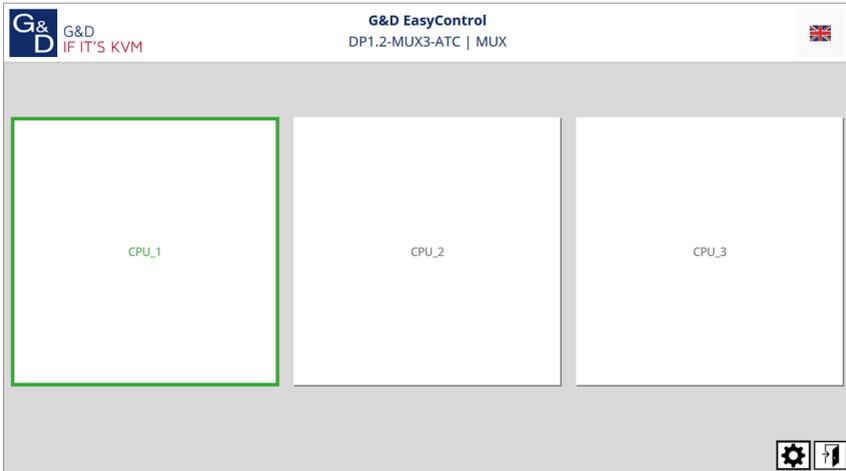


Figure 4: User interface of the »EasyControl« switching tool

How to switch to another KVM channel:

1. Click on the button of the channel you want to switch off.

Changing the colour scheme of the switching tool

NOTE: The selected colour scheme is saved in the user settings of the active user. The next time the switching tool is used, the previously selected colour scheme is applied.

How to change the colour scheme of the switching tool:

1. Click on the gears icon at the bottom right.
2. Click on the button of the colour scheme you want to use (**Skin 1**, **Skin 2** or **Skin 3**).
3. Each colour scheme is available in a variant for light and dark working environments. Select the desired variant:

Bright:	Apply variant for bright working environments
Dark:	Apply variant for dark working environments

4. Click the gears icon again to close the settings.

Renaming KVM channels

IMPORTANT: Only users with **Superuser** rights can edit the names of the individual KVM channels in the switching tool.

How to rename the KVM channels:

1. Click on the gears icon () at the bottom right.
2. Edit the names in the fields **Channel 1**, **Channel 2** and/or **Channel 3**.
3. Click on **Save**.
4. Click the gears icon again to close the settings.

Closing the »EasyControl« switching tool

How to close the switching tool:

1. Click on the **Exit** icon () at the bottom right.

Basic configuration of the web application

Network settings

The device provides two network interfaces (*Network A* and *Network B*). The network interfaces lets you integrate a device into up to two separate networks.

IMPORTANT: Note the separate instructions about the *Initial configuration of the network settings* on page 6.

Configuring the network interfaces

To connect the device to a local network, you need to configure the settings of the network.

NOTE: These are the default settings:

- IP address of *network interface A*:
192.168.0.1
- IP address of *network interface B*:
Obtain address via **DHCP**
- Global network settings:
Obtain settings via **DHCP**

How to configure the settings of a network interface:

IMPORTANT: It is not possible to use both network interfaces within the same subnet.

NOTE: The *Link Local* address space 169.254.0.0/16 is reserved for internal communication between devices in accordance with RFC 3330. It is not possible to assign an IP address of this address space.

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Interfaces**.

5. Enter the following values under **Interface A** or **Interface B**:

Operational mode:	<p>Select the operational mode of Interface A or Interface B:</p> <ul style="list-style-type: none"> ▪ Off: Disable network interface. ▪ Static: A static IP address is assigned. ▪ DHCP: Obtain IP address from a DHCP server: <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>The drop-down list shows the text Link aggregation active if the interface has been added to a network interface group.</p> <p>In this case, configure the network interfaces under »Link aggregation«.</p> </div>
IP address:	Enter the IP address of the interface (only when operating mode <i>Static</i> is selected).
Netmask:	Enter the netmask of the network (only when operating mode <i>Static</i> is selected).

6. Click on **Save**.

Configuring global network settings

Even in complex networks global network settings ensure that the web application is available from all subnetworks.

How to configure global network settings:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Now go to **Global settings**.

5. Enter the following values:

Operating mode:	Select the operating mode: <ul style="list-style-type: none">▪ Static: Use static settings.▪ DHCP: Obtain settings from a DHCP server.
<div style="border: 1px solid black; padding: 5px; margin: 5px auto; width: 80%;">When selecting the <i>DHCP</i> mode, the following settings are applied automatically. It is not possible to enter any values.</div>	
Hostname:	Enter the device's hostname.
Domain:	Enter the domain to which the device should belong.
Gateway:	Enter the gateway's IP address.
DNS server 1:	Enter the IP address of the DNS server.
DNS server 2:	Optionally, enter the IP address of another DNS server.

6. Click on **Save**.

Increasing the reliability of network connections by link aggregation

By default, you can use both network interfaces at the same time to access the web application from two different network segments, for example

To increase reliability, the network interfaces can be grouped via *link aggregation*. Within a group, only one interface is active at a time. Another interface only becomes active if the active interface fails.

Two different modes are available for monitoring the interfaces:

- **MII mode:** The carrier status of the network interface is monitored via the *media independent interface* überwacht. In this mode, only the functionality of the network is tested.
- **ARP mode:** Using the *address resolution protocol*, requests are sent to an ARP target on the network. The response from the ARP target confirms both the functionality of the network interface and a proper network connection to the ARP target.

If the ARP target is connected to the network but temporarily offline, the requests cannot be answered. For this reason, you should determine several ARP targets in order to obtain a response from at least one target even if an ARP target fails.

NOTE: It is not possible to combine **MII** and **ARP mode**.

How to configure the settings of grouped network interfaces:

NOTE: The *Link Local* address space 169.254.0.0/16 is reserved for internal communication between devices in accordance with RFC 3330. It is not possible to assign an IP address of this address space.

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Link aggregation**.
5. Enter the following values under **Network**:

Name:	Enter the name of the network interface group.
Operating mode:	Select the operating mode for grouped network interfaces: <ul style="list-style-type: none"> ▪ Off: Disable link aggregation. <i>Go to »Interfaces« to configure the network interfaces.</i> ▪ Static: A static IP address is assigned. ▪ DHCP: Obtain IP address from a DHCP server.
IP address:	Enter the IP address of the interface (only when operating mode <i>Static</i> is selected).
Netmask:	Enter the netmask of the network (only when operating mode <i>Static</i> is selected).

6. Enter the following values under **Parameter**:

Primary slave:	<p>Select whether data traffic should preferably be transmitted via the interface <i>Network A (Interface A)</i> or the interface <i>Network B (Interface B)</i>. As soon as the selected interface is available, this interface is used for data traffic.</p> <p>If you select the option None, the data traffic is sent via any interface. A switch-over occurs only if the active interface fails.</p>
Link monitoring:	<p>Select whether you want to use the MII or the ARP mode (see explanation above) to monitor the interface.</p>
MII down delay:	<p>Waiting period in milliseconds before a failed network interface is disabled.</p> <p>The entered value must be a multiple of 100 ms (the MII link monitoring frequency).</p>
MII up delay:	<p>Waiting period in milliseconds before a reset network interface is activated.</p> <p>The entered value must be a multiple of 100 ms (the MII link monitoring frequency).</p>
ARP interval:	<p>Enter the interval (100 to 10,000 milliseconds) after which the system checks for incoming ARP packets of the network interfaces.</p>
ARP validate:	<p>The validation ensures that the ARP packet for a particular network interface has been generated by one of the specified ARP targets.</p> <p>Select whether or which of the incoming ARP packets should be validated:</p> <ul style="list-style-type: none">▪ None: ARP packets are not validated (default).▪ Active: Only the ARP packets of the active network interface are validated.▪ Backup: Only the ARP packets of the inactive network interface are validated▪ All: The ARP packets of all network interfaces of the group are validated.
ARP target:	<p>The table contains a list of all configured ARP targets.</p> <p>Use the buttons New, Edit and Delete to manage the ARP targets.</p>

7. Click on **Save**.

Reading out the status of the network interfaces

The current status of both network interfaces can be read out in the web application.

How to detect the status of the network interfaces:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Information**.
4. Go to the paragraph **Link status**.
5. The paragraphs **Interface A** and **Interface B** include the following values:

Link detected:	Connection to the network established (yes) or disconnected (no).
Auto-negotiation:	Both the transmission speed and the duplex method have been configured automatically (yes) or manually by the administrator (no).
Speed:	Transmission speed
Duplex:	Duplex mode (full or half)

6. Click on **Save**.

Creating and administrating netfilter rules

By default, all network computers have access to the web application *ConfigPanel* (open system access).

NOTE: The open system access allows unrestricted connections via ports 80/TCP (HTTP), 443/TCP (HTTPS) and 161/UDP (SNMP).

Once a netfilter rule has been created, open system access is disabled and all incoming data packets are compared with the netfilter rules. The list of netfilter rules is processed in the stored order. As soon as a rule applies, the corresponding action is executed and the following rules are ignored.

Creating new netfilter rules

How to create a new netfilter rule:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Netfilter**.
5. Enter the following values:

Interface:	In the pull-down menu, select on which network interfaces the data packets are to be intercepted and manipulated: <ul style="list-style-type: none">▪ All▪ Interface A▪ Interface B▪ Link-Aggregation group
Option:	In the pull-down menu, select how to interpret the sender information of the rule: <ul style="list-style-type: none">▪ Normal: The rule applies to data packets whose sender information corresponds to the IP address or MAC address specified in the rule.▪ Inverted: The rule applies to data packets whose sender information does <i>not</i> correspond to the IP address or MAC address specified in the rule.

**IP address/
Netmask:** Enter the IP address of the data packets or - by using the **Netmask** field - the address space of the IP addresses.

Examples:

- **192.168.150.187:** for IP address 192.168.150.187
- **192.168.150.0/24:** IP addresses of section 192.168.150.x
- **192.168.0.0/16:** IP addresses of section 192.168.x.x
- **192.0.0.0/8:** IP addresses of section 192.x.x.x
- **0.0.0.0/0:** all IP addresses

NOTE: The *IP address* and/or a *MAC address* can be specified within a rule.

MAC address: Enter the MAC address to be considered in this filter rule.

NOTE: The *IP address* and/or a *MAC address* can be specified within a rule.

Filter rule:

- **Drop:** Data packets whose sender information matches the IP address or MAC address are not processed.
- **Accept:** Data packets whose sender information matches the IP address or MAC address are processed.

Service: Select a specific service for which this rule is used exclusively, or choose (**All**).

6. Click on **Add** to save the values in a new filter rule.

The new filter rule is added to the end of the list of existing filter rules.

7. Click on **Save**.

NOTE: The new netfilter rule is not applied to active connections. Restart the device if you want to disconnect the active connections and then apply all the rules..

Editing existing netfilter rules

How to edit an existing netfilter rule:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Netfilter**.

5. In the list of existing netfilter rules, select the rule you want to change.
6. The current rule settings are displayed in the upper part of the dialog. Check and change the following settings.

Interface:	In the pull-down menu, select on which network interfaces the data packets are to be intercepted and manipulated: <ul style="list-style-type: none">▪ All▪ Interface A▪ Interface B
Option:	In the pull-down menu, select how to interpret the sender information of the rule: <ul style="list-style-type: none">▪ Normal: The rule applies to data packets whose sender information corresponds to the IP address or MAC address specified in the rule.▪ Inverted: The rule applies to data packets whose sender information does <i>not</i> correspond to the IP address or MAC address specified in the rule.
IP address/Netmask:	Enter the IP address of the data packets or - by using the Netmask field - the address space of the IP addresses. Examples: <ul style="list-style-type: none">▪ 192.168.150.187: for IP address 192.168.150.187▪ 192.168.150.0/24: IP addresses of section 192.168.150.x▪ 192.168.0.0/16: IP addresses of section 192.168.x.x▪ 192.0.0.0/8: IP addresses of section 192.x.x.x▪ 0.0.0.0/0: all IP addresses <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">NOTE: The <i>IP address</i> and/or a <i>MAC address</i> can be specified within a rule.</div>
MAC address:	Enter the MAC address to be considered in this filter rule. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">NOTE: The <i>IP address</i> and/or a <i>MAC address</i> can be specified within a rule.</div>
Filter rule:	<ul style="list-style-type: none">▪ Drop: Data packets whose sender information matches the IP address or MAC address are not processed.▪ Accept: Data packets whose sender information matches the IP address or MAC address are processed.
Service:	Select a specific service for which this rule is used exclusively, or choose (All).

7. Click on **Apply** to save your settings.
8. Click on **Save**.

NOTE: The new netfilter rule is not applied to active connections. Restart the device if you want to disconnect the active connections and then apply all the rules..

Deleting existing netfilter rules

How to delete existing netfilter rules:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Netfilter**.
5. In the list of existing netfilter rules, select the rule you want to delete.
6. Click on **Delete**.
7. Confirm the confirmation prompt by clicking on **Yes** or cancel the process by clicking on **No**.
8. Click on **Save**.

Changing the order or priority of existing netfilter rules

The list of netfilter rules is processed in the stored order. As soon as a rule applies, the corresponding action is executed and the following rules are ignored.

IMPORTANT: Pay attention to the order or priority of the individual rules, especially when adding new rules.

How to change the order or priority of existing netfilter rules:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Netfilter**.
5. In the list of existing netfilter rules, select the rule whose order/priority you want to change.
6. Click the button **Arrow up** to increase the priority or the button **Arrow down** to decrease the priority.
7. Click on **Save**.

Creating an SSL certificate

Use the free implementation of the SSL/TLS protocol *OpenSSL* to create an SSL certificate.

The following websites provide detailed information about operating OpenSSL:

- OpenSSL project: <http://www.openssl.org/>
- Win32 OpenSSL: <http://www.slproweb.com/products/Win32OpenSSL.html>

IMPORTANT: Creating an SSL certificate requires the software OpenSSL. If necessary, follow the instructions on the websites mentioned above to install the software.

The instructions on the following pages explain how to create an SSL certificate.

Special features for complex KVM systems

If different G&D devices are to communicate with each other within a KVM system, the identical *Certificate Authority* (see page 26) must be used when creating certificates for these devices.

Alternatively, the identical PEM file (see page 29) can also be used for all devices. In this case, all characteristics of the certificates are identical.

Creating a Certificate Authority

A *Certificate Authority* enables the owner to create digital certificates (e. g. for a matrix switch).

How to create a key for the Certificate Authority:

IMPORTANT: The following steps describe how to create keys that are not coded. If necessary, read the OpenSSL manual to learn how to create a coded key.

1. Enter the following command into the command prompt and press **Enter**:

```
openssl genrsa -out ca.key 4096
```

2. OpenSSL creates the key and stores it in a file named *ca.key*.

How to create the Certificate Authority:

1. Enter the following command into the command prompt and press **Enter**:

```
openssl req -new -x509 -days 3650 -key ca.key -out ca.crt
```

2. Now, OpenSSL queries the data to be integrated into the certificate.

The following table shows the different fields and an exemplary entry:

Field	Example
Country Name (2 letter code)	DE
State or Province Name	NRW
Locality Name (e.g., city)	Siegen
Organization Name (e.g., company)	Guntermann & Drunck GmbH
Organizational Unit Name (e.g., section)	
Common Name (e.g., YOUR name)	Guntermann & Drunck GmbH
Email Address	

IMPORTANT: The device's IP address must not be entered under *Common Name*.

Enter the data you want to state, and confirm each entry by pressing **Enter**.

3. OpenSSL creates the key and stores it in a file named *ca.crt*.

IMPORTANT: Distribute the certificate *ca.crt* to the web browsers using the web application. The certificate checks the validity and the trust of the certificate stored in the device.

Creating any certificate

How to create a key for the certificate to be created:

IMPORTANT: The following steps describe how to create keys that are not coded. If necessary, read the OpenSSL manual to learn how to create a coded key.

1. Enter the following command into the command prompt and press **Enter**:

```
openssl genrsa -out server.key 4096
```

2. OpenSSL creates the key and stores it in a file named *server.key*.

How to create the certificate request:

1. Enter the following command into the command prompt and press **Enter**:

```
openssl req -new -key server.key -out server.csr
```

2. Now, OpenSSL queries the data to be integrated into the certificate.

The following table shows the different fields and an exemplary entry:

Feld	Beispiel
Country Name (2 letter code)	DE
State or Province Name	NRW
Locality Name (e.g., city)	Siegen
Organization Name (e.g., company)	Guntermann & Drunck GmbH
Organizational Unit Name (e.g., section)	
Common Name (e.g., YOUR name)	192.168.0.10
Email Address	

IMPORTANT: Enter the IP address of the device on which the certificate is to be installed into the row *Common Name*.

Enter the data you want to state, and confirm each entry by pressing **Enter**.

3. If desired, the *Challenge Password* can be defined. This password is needed if you have lost the secret key and the certificate needs to be recalled.
4. Now, the certificate is created and stored in a file named *server.csr*.

Creating and signing an X509 certificate

1. Enter the following command into the command prompt and press **Enter**:

```
openssl x509 -req -days 3650 -in server.csr -CA ca.crt -CAkey ca.key -set_serial 01 -out server.crt
```

2. OpenSSL creates the certificate and stores it in a file named *server.crt*.

Creating a PEM file

NOTE: The *.pem* file contains the following three components:

- server certificate
- private server key
- certificate of the certification authority

If these three components are available separately, enter them successively to the *Clear text* entry before updating the certificate stored in the device.

1. Enter the following command(s) into the prompt and press **Enter**:
 - a. Linux

```
cat server.crt > gcdcd.pem
cat server.key >> gcdcd.pem
cat ca.crt >> gcdcd.pem
```

- b. Windows

```
copy server.crt + server.key + ca.crt gcdcd.pem
```

2. The *gcdcd.pem* file is created while copying. It contains the created certificate and its key as well as the *Certificate Authority*.

Selecting an SSL certificate

By default, each G&D device with integrated web application stores at least one SSL certificate. The certificate has two functions:

- The connection between web browser and web application can be established via an SSL-secured connection. In this case, the SSL certificate allows the user to authenticate the opposite side.

If the device's IP address does not match the IP address stored in the certificate, the web browser sends a warning message.

ADVICE: You can import a user certificate so that the device's IP address matches the IP address stored in the certificate.

- The communication between G&D devices within a system is secured via the devices' certificates.

IMPORTANT: Communication between devices is possible only if all devices within a KVM system use certificates of the same *Certificate Authority* (see page 26).

How to select the SSL certificate you want to use:

IMPORTANT: Selecting and activating another certificate terminates all active sessions of the web application.

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Certificate**.
5. Select the certificate you want to use:

G&D certificate #1: This certificate is enabled for *new* devices.

ADVICE: Older devices do *not* support **certificate #1**. In this case use **certificate #2** or a **user certificate** within the KVM system.

G&D certificate #2: This certificate is supported by all G&D devices with integrated web application.

User certificate: Select this option if you want to use a certificate purchased from a certificate authority or if you want to use a user certificate.

Now you can import and upload the certificate:

1. Click on **Import certificate from file** and use the file dialog to select the .pem file you want to import.

You can also copy the plain text of the server certificate, the server's private key and the certificate of the certificate authority to the text box.

2. Click on **Upload and activate** to store and activate the imported certificate for the device.

3. Click on **OK** to close the window.

Firmware update

The firmware of each device of the KVM system can be updated via the web application.

IMPORTANT: This function only updates the firmware of the device on which the web application was started.

How to execute a firmware update:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure.
3. Open the menu **Service tools** and select the entry **Firmware update**.
4. Click on **Search**.
5. Use the file dialog to select the location and name of the update file.
6. Click on **Open**.
7. Click on **Update**.

Restoring the system defaults

With this function, the system defaults of the device on which the web application is operated can be restored.

How to restore the system defaults:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure.
3. Open the menu **Service tools** and select the entry **System defaults**.
4. Select the scope of the recovery:

Reset all settings:	Reset all settings of the device.
Reset only local network settings:	Reset only local network settings.
Reset only KVM application settings:	Reset all settings except the local network settings.

5. Click on **Set system defaults**.

Restarting the KVM switch

This function restarts the KVM switch. Before restarting, you will be prompted for confirmation to prevent an accidental restart.

How to restart the KVM switch using the web application:

1. In the menu, click on **KVM switches**.
2. Click on the desired device.
3. Open the menu **Service tools** and select the entry **Restart**.
4. Confirm the confirmation prompt with **Yes**.

Network functions of the devices

The different devices within the KVM system (e.g. *KVM extenders* and *KVM matrix switches*) provide *separate* network functions.

The following functions can be configured for each device within the KVM system:

- Authentication against directory services (LDAP, Active Directory, RADIUS, TACACS+)
- Time synchronisation via NTP server
- Forwarding of log messages to syslog servers
- Monitoring and control of computers and network devices via *Simple Network Management Protocol* (see page 43 ff.)

NTP server

The date and time of a device can be set either automatically by time synchronization with an NTP server (*Network Time Protocol*) or manually.

Time sync with an NTP server

How to change the NTP time sync settings:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **NTP server** and enter the following values:

NTP time sync:	By selecting the corresponding entry in the pull-down menu, you can enable or disable the the time synchronization: <ul style="list-style-type: none"> ▪ Disabled ▪ Enabled
NTP server 1:	Enter the IP address of a time server.
NTP server 2:	<i>Optionally</i> enter the IP address of a second time server.
Time zone:	Use the pull-down menu to select the time zone of your location.

5. Click on **Save**.

Manual setting of time and date

How to manually set the time and date of the device:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **NTP server**.

IMPORTANT: If necessary, disable the **NTP time sync** option. Otherwise, you might not be able to set time and date manually.

5. Go to the entry **Time** under **Time/date** to enter the current time (*hh:mm:ss*).
6. Go to the entry **Date** under **Time/date** to enter the current time (*DD.MM.YYYY*).

ADVICE: Click on **Accept local date** to copy the current system date of the computer on which the web application was opened to the *Time* and *Date* fields.

7. Click on **Save**.

Logging syslog messages

The syslog protocol is used to transmit log messages in networks. The log messages are transmitted to a syslog server that logs the log messages of many devices in the computer network.

Among other things, eight different severity codes have been defined to classify the log messages:

- | | | |
|-----------------------|---------------------|-------------------|
| ▪ 0: Emergency | ▪ 3: Error | ▪ 6: Info |
| ▪ 1: Alert | ▪ 4: Warning | ▪ 7: Debug |
| ▪ 2: Critical | ▪ 5: Note | |

The web application enables you to configure whether the syslog messages are to be locally logged or sent to up to two syslog servers.

Local logging of syslog messages

How to locally log syslog messages:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Syslog** enter the following data under **Syslog local**:

Syslog local:	By selecting the corresponding entry in the pull-down menu, you can enable or disable the local logging of syslog messages: <ul style="list-style-type: none"> ▪ Disabled ▪ Enabled
Log level:	In this pull-down menu, select the severity from which a log message is to be logged. The selected severity and all lower severity levels are logged.
<p>If you select the severity <i>2 - Critical</i>, messages for this code as well as for the severity levels <i>1 - Alert</i> and <i>0 - Emergency</i> are logged.</p>	

5. Click on **Save**.

Sending syslog messages to a server

How to send syslog messages to a server:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Syslog** and enter the following values under **Syslog server 1** or **Syslog server 2**:

Syslog server:	By selecting the corresponding entry in the pull-down menu, you can enable or disable the sending of syslog messages to a server: <ul style="list-style-type: none">▪ Disabled▪ Enabled
Log level:	In this pull-down menu, select the severity level from which a log message is to be logged. The selected severity level and all lower severity levels are logged. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">If you select the severity <i>2 - Critical</i>, messages for this code as well as for the severity levels <i>1 - Alert</i> and <i>0 - Emergency</i> are logged.</div>
IP address/ DNS name:	Enter the IP address or name of the server to which the syslog messages are to be sent.
Port:	Enter the port - usually 514 - on which the syslog server accepts incoming messages.
Protocol:	Select the protocol - usually UDP - on which the syslog server accepts incoming messages: <ul style="list-style-type: none">▪ TCP▪ UDP

5. Click on **Save**.

Viewing and saving local syslog messages

If the function to log the local syslog messages is activated, these syslog messages can be viewed and, if necessary, stored in the information dialog.

How to view and store local syslog messages:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure.
3. Open the menu **Service utility** and select the entry **Syslog**.
4. Click on **Fetch syslog**.

The local syslog messages are now retrieved and displayed in the text field.

ADVICE: Click on **Save syslog** to save the messages in a text file.

5. Click on the red **[X]** to close the window.

User authentication with directory services

In internal corporate networks, user accounts are often managed centrally by a directory service. The device can access such a directory service and authenticate users against the directory service.

NOTE: If the directory service fails to authenticate the user account *Admin*, the user account is authenticated against the database of the device.

The directory service is used exclusively to authenticate a user. Rights are granted by the database of the KVM system. The following paragraphs describe the different scenarios:

▪ The user account exists in the directory service and in the KVM system

The user can log on with the password stored in the directory service. After a successful login, the rights of the account with the same name are assigned to the user in the KVM system.

NOTE: The password with which the user has successfully logged on is transferred to the database of the KVM system.

▪ **The user account exists in the directory service, but not in the KVM system**

A user who has been successfully authenticated against the directory service but does not have an account of the same name in the KVM system's database will be granted the rights of a *RemoteAuth* user.

If required, change the rights of this particular user account to set the rights for users without a user account.

ADVICE: Deactivate the *RemoteAuth* user to prevent users without user accounts to log on to the KVM system.

▪ **The user account exists in the KVM system, but not in the directory service**

If the directory service is available, it reports that the user account does not exist. Access to the KVM system is denied to the user.

If the server is not available but the fallback mechanism (see page 37) is activated, the user can log on with the password stored in the KVM system.

IMPORTANT: In order to prevent the logon of a user locked or deactivated in the directory service when the connection to the directory service fails, please observe the following security rules:

- If a user account is deactivated or deleted in the directory service, this action must also be carried out in the user database of the KVM system!
- Activate the fallback mechanism only in exceptional cases.

How to configure the authentication of user accounts:

NOTE: If no directory service is used, the user accounts are managed by the device.

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **Authentication**.

5. Enter the following values under **Authentication server**:

Auth. Server:	Select the Local option if the user administration is to be carried out by the KVM system. If you want to use a certain directory service, select the corresponding entry from the pull-down menu: <ul style="list-style-type: none">▪ LDAP▪ Active Directory▪ Radius▪ TACACS+
ADVICE: After selecting a directory service, enter the settings of the directory service server in the <i>Server Settings</i> section of the dialog box.	
Fallback:	Activate this option if you want to use the local user administration of the KVM system if the directory service is temporarily unavailable.
IMPORTANT: In order to prevent the logon of a user locked or deactivated in the directory service when the connection to the directory service fails, please observe the following security rules: <ul style="list-style-type: none">▪ If a user account is deactivated or deleted in the directory service, this action must also be carried out in the user database of the KVM system!▪ Activate the fallback mechanism only in exceptional cases.	

6. Click on **Save**.

Monitoring functions

Under **KVM extender** and **System monitoring** you can view the monitoring values of any devices connected to the KVM system.

The following exemplary figure shows the monitoring values *Status*, *Main power* and *Fan speed* of a KVM switch:

The screenshot shows a web interface titled "KVM switches" with a search bar and a table. The table has columns for Name, Status, Main power, and Fan speed. A single row is visible for a device named "MUX".

Name	Status	Main power	Fan speed
MUX	Online	On	1991

Figure 5: Detailed view of an exemplary monitoring table

The values configured for the table view (see *Configuring table columns* on page 10) are listed in the table.

You can see immediately from the colour whether the status is correct (green) or critical (red). The text displayed in the column also provides information about the current status.

Viewing all monitoring values

You can see the list of all monitoring values under KVM switches.

How to show a list of all monitoring values:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on the tab **Monitoring**.

The displayed table contains a list of all available monitoring values.

4. Click on **Save**.

Enabling/disabling monitoring values

You can switch each monitoring value on and off *separately* or you can switch all monitoring values on or off *together*.

Deactivated monitoring values are *not* displayed in the web application.

IMPORTANT: The web application does *not* give any warnings about deactivated monitoring values and does also *not* send any SNMP traps for these values.

How to enable/disable an *individual* monitoring value:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on the tab **Monitoring**.
4. Turn the slider in the column **Enabled** of the desired monitoring value to the right (enabled) or to the left (disabled).
5. Click on **Save**.

How to enable/disable *all* monitoring values:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on the tab **Monitoring**.
4. Mark or unmark the **Enabled** checkbox in the column header to switch all values on or off.
5. Click on **Save**.

Advanced features for managing critical devices

The **Monitoring status** icon (see *User interface* on page 8) shows you at a glance whether all monitoring values are within the normal range (green icon) or if at least one monitoring value is outside the normal range (yellow or red icon).

The *Monitoring status* icon always takes the colour of the *most critical* monitoring value

Displaying the list of critical monitoring values

If the **Monitoring status** icon is displayed in yellow or red, you can access the **Active alarms** dialog by clicking on the icon.

The *Active alarms* dialog shows any critical values.

Acknowledging the alarm of a critical device

Many alarm messages require immediate action by the administrator. Other alarms (for example, the failure of the redundant power supply), on the other hand, indicate possibly uncritical circumstances.

In such a case, you can acknowledge the alarm message of a value. The value is thus downgraded from **Alarm** (red) to **Warning** (yellow).

How to acknowledge the monitoring message of a device:

1. Click on the red **Monitoring status** icon at the top right.
2. Select the alarm you want to acknowledge.
3. Click on **Acknowledge**.

Monitoring devices via SNMP

The *Simple Network Management Protocol* (SNMP) is used to monitor and control computers and network devices.

Practical use of the SNMP protocol

A *Network Management System* (NMS) is used to monitor and control computers and network devices. The system queries and collects data from the *agents* of the monitored devices.

NOTE: An *agent* is a program that runs on the monitored device and determines its status. The determined data is transmitted to the *Network Management System* via SNMP.

If an *agent* detects a serious event on the device, it can automatically send a *trap* packet to the *Network Management System*. This ensures that the administrator is informed about the event at short notice.

Configuring an SNMP agent

How to configure an SNMP agent:

1. In the menu, click on **KVM switches**.
2. Click on the device you want to configure and then click on **Configuration**.
3. Click on the tab **Network**.
4. Go to the paragraph **SNMP agent**.
5. Enter the following values under *Global*:

Status:	Select the particular entry to either switch the SNMP agent off (Off) or on (Enabled).
Protocol:	Select the protocol (TCP or UDP) – usually UDP – to be used to transmit the SNMP packets.
Port:	Define the port – usually 161 – on which the <i>incoming</i> SNMP packets are to be accepted.
SysContact:	Enter the admin's contact data (e.g. direct dial or e-mail address).
SysName:	Enter the device name.
SysLocation:	Enter the location of the device.

6. If you want to process packets of protocol version **SNMPv2c**, enter the data listed on the following page in the section with the same name.

Access:	Activate read access (View), write access (Full) or deny access (No) via the <i>SNMPv2c</i> protocol.
Source:	Enter the IP address or the address space of the addresses of incoming SNMP packets. Examples: <ul style="list-style-type: none">▪ 192.168.150.187: Only IP address 192.168.150.187▪ 192.168.150.0/24: IP addresses of space 192.168.150.x▪ 192.168.0.0/16: IP addresses of space 192.168.x.x▪ 192.0.0.0/8: IP addresses of space 192.x.x.x
Read-only community:	Enter the name of the <i>Community</i> which has also been selected in the <i>Network Management System</i> .
Write-only community:	Enter the name of the <i>Community</i> which has also been selected in the <i>Network Management System</i> .

IMPORTANT: The password (*Community*) of the packages of protocol version *SNMPv2c* is transmitted unencrypted and can therefore be easily tapped.

If necessary, use the protocol version *SNMPv3* (see below) and a high *security level* to ensure secure data transmission.

7. If you want to process packets of protocol version **SNMPv3c**, enter the data in the section with the same name:

Access:	Activate read access (View), write access (Full) or deny access (No) via the <i>SNMPv3c</i> protocol.
User:	Enter the username for the communication with the <i>Network Management System</i> .
Authentication protocol	Select the authentication protocol (MD5 or SHA) which has been activated in the <i>Network Management System</i> .
Authentication passphrase	Enter the authentication passphrase for the communication with the <i>Network Management System</i> .
Security level	Select one of the following options: <ul style="list-style-type: none"> ▪ NoAuthNoPriv: user authentication and <i>Privacy</i> protocol deactivated ▪ AuthNoPriv: user authentication activated, <i>Privacy</i> protocol deactivated ▪ AuthPriv: user authentication and <i>Privacy</i> protocol activated
Privacy protocol:	Select the privacy protocol (DES or AES) which has been activated in the <i>Network Management System</i> .
Privacy passphrase:	Enter the privacy passphrase for secure communication with the <i>Network Management System</i> .
Engine ID method:	Select how the <i>SnmEngineID</i> should be assigned: <ul style="list-style-type: none"> ▪ Random: The <i>SnmEngineID</i> is re-assigned with every restart of the device. ▪ Fix: The <i>SnmEngineID</i> is the same as the MAC address of the device's network interface. ▪ User: The string entered under <i>Engine ID</i> is used as <i>SnmEngineID</i>.
Engine ID:	When using the <i>Engine ID method User</i> , enter the string that is used as <i>Engine ID</i> .

8. Click on **Save**.

Configuring SNMP traps

How to add a new trap or edit an existing trap:

1. In the menu, click on **KVM switches**.
2. Click on the tab **Network**.
3. Go to the paragraph **SNMP trap**.
4. Click on **Add** or on **Edit**.
5. Enter the following values under **Global**:

Server:	Enter the IP address of the <i>Network Management Server</i> .
Protocol:	Select the protocol (TCP or UDP) – usually UDP – to be used to transmit the SNMP packets.
Port:	Enter the port – usually 162 – on which <i>outgoing</i> SNMP packets are transmitted.
Retries:	Enter the number of retries to send an <i>SNMP Inform</i> .
NOTE: Inputs are only possible if the <i>Inform</i> option is selected in the <i>Notification type</i> field.	
Timeout:	Enter the timeout (in seconds) after which an <i>SNMP Inform</i> will be resent if no confirmation is received.
NOTE: Inputs are only possible if the <i>Inform</i> option is selected in the field <i>Notification type</i> .	
Log level:	Select the severity of an event from which an SNMP trap is to be sent. The selected severity and all lower severity levels are logged.
NOTE: If you select the severity <i>2 - Critical</i> , SNMP traps will be sent for events of this severity level as well as for events of the severity levels <i>1 - Alert</i> and <i>0 - Emergency</i> .	
Version:	Select if the traps are to be created and sent according to the <i>SNMPv2c (v2c)</i> or <i>SNMPv3 (v3)</i> protocol.
Notification type:	Select if events are sent as <i>Trap</i> or <i>Inform</i> packet.
NOTE: <i>Inform</i> packets require a confirmation of the <i>Network Management System</i> . If this confirmation is not available, transmission is repeated.	

6. If you selected protocol version **SNMPv2c** in the last step, enter the name of the *Community*, which was also selected in the *Network Management System*.

IMPORTANT: The password (*Community*) of the packages of protocol version *SNMPv2c* is transmitted unencrypted and can therefore be easily tapped.
If necessary, use the protocol version *SNMPv3* (see below) and a high *security level* to ensure secure data transmission.

7. If you selected protocol version **SNMPv3** in step 5, enter the following data in the section with the same name:

User:	Enter the username for the communication with the <i>Network Management System</i> .
Authentication protocol	Select the authentication protocol (MD5 or SHA) which has been activated in the <i>Network Management System</i> .
Authentication passphrase	Enter the authentication passphrase for secure communication with the <i>Network Management System</i> .
Security level	Select one of the following options: <ul style="list-style-type: none"> ▪ NoAuthNoPriv: user authentication and <i>Privacy</i> protocol deactivated ▪ AuthNoPriv: user authentication activated, <i>Privacy</i> protocol deactivated ▪ AuthPriv: user authentication and <i>Privacy</i> protocol activated
Privacy protocol:	Select the privacy protocol (DES or AES) which has been activated in the <i>Network Management System</i> .
Privacy passphrase:	Enter the privacy passphrase for secure communication with the <i>Network Management System</i> .
Engine ID:	Enter the <i>Engine ID</i> of the trap receiver.

8. Click on **Save**.

How to delete an existing trap:

1. In the menu, click on **KVM switches**.
2. Click on the tab **Network**.
3. Go to the paragraph **SNMP trap**.
4. In the row of the receiver you want to delete, click on **Delete**.
5. Click on **Save**.

Users and groups

By using user accounts it is possible to assign users with individual rights.

IMPORTANT: The administrator and all users assigned with *superuser* rights are authorized to create and delete users and to edit rights as well as user-related settings.

Creating a new user account

The web application manages up to 256 user accounts. Each user account has individual login data, rights and user-specific settings for the KVM system.

How to create a new user account:

1. On the menu, click on **User**.
2. Click on **Add user**.
3. Enter the following values in the dialog box:

Name:	Enter the username.
Password:	Enter the user account password.
Repeat password:	Repeat the password.
Clear text:	If necessary, mark this entry to view and check both passwords.
Full name:	If desired, enter the user's full name.
Comment:	If desired, enter a comment regarding the user account.
Enabled:	Mark this checkbox to activate the user account.

If the user account is deactivated, the user is not able to access the KVM system.

4. Click on **Save**.

IMPORTANT: After the user account has been created, it does not have any rights within the KVM system.

Renaming a user account

How to change the name of a user account:

1. On the menu, click on **Users**.
2. Click on the user account you want to configure and then click on **Configuration**.
3. Enter the username under **Name**.
4. *Optional:* Enter the user's full name under **Full name**
5. Click on **Save**.

Changing the password of a user account

How to change the password of a user account:

1. On the menu, click on **Users**.
2. Click on the user account you want to configure and then click on **Configuration**.
3. Change the following values in the dialog box:

New password:	Enter the new password.
Confirm password:	Repeat the new password.
Clear text:	Mark this entry to view and check both entered passwords.

4. Click on **Save**.

Enabling or disabling a user account

IMPORTANT: If a user account is disabled, the user has no access to the KVM system.

How to enable or disable a user account:

1. On the menu, click on **User**.
2. Click on the user account you want to configure and then click on **Configuration**.
3. Mark the check box **Enabled** to activate the user account.

If you want to block access to the system with this user account, unmark the checkbox.

4. Click on **Save**.

Deleting a user account

How to delete a user account:

1. On the menu, click on **User**.
2. Click on the user account you want to delete and then click on **Delete**.
3. Confirm the confirmation prompt by clicking on **Yes** or cancel the process by clicking on **No**.

System rights

Rights for unrestricted access to the system (Superuser)

The *Superuser* right allows a user unrestricted access to the configuration of the KVM system.

NOTE: The information about the user's previously assigned rights remains stored when the <i>Superuser</i> right is activated and is reactivated when the right is revoked.
--

How to assign a user account with unrestricted access to the system:

1. On the menu, click on **Users**.
2. Click on the user account you want to configure and then click on **Configuration**.
3. Click on the tab **System rights**.
4. Under **Superuser right**, select between the following options:

Yes:	Allow full access to the KVM system and the connected devices
No:	Deny full access to the KVM system and the connected devices

5. Click on **Save**.

Changing the login right to the web application

How to change the login right to the web application:

1. On the menu, click on **Users**.
2. Click on the user account you want to configure and then click on **Configuration**.
3. Click on the tab **System rights**.
4. Under **Config Panel Login**, select between the following options:

Yes:	Allow access to web application
No:	Deny access to web application

5. Click on **Save**.

Rights to change your own password

How to change the right to change your own password:

1. On the menu, click on **Users**.
2. Click on the user account you want to configure and then click on **Configuration**.
3. Click on the tab **System rights**.
4. Under **Change own password**, select between the following options:

Yes:	Allow users to change their own password
No:	Deny users the right to change their own password

5. Click on **OK** to save your settings.

Advanced functions of the KVM system

Temporarily (de)activating SNMP traps (Maintenance mode)

By activating the maintenance mode, the user is enabled to deactivate SNMP traps (see page 46), e.g. for devices that are occupied for reasons of maintenance.

The status messages are displayed again after the maintenance mode has been deactivated.

(De)activating the maintenance mode

How to (de)activate a device's maintenance mode:

1. In the menu, click on **KVM switches**.
2. Right-click the device and click on **Maintenance > On** or **Maintenance > Off** in the context menu.

Viewing a list of devices in maintenance mode

How to display the list of devices in maintenance mode:

1. Click on the **System monitoring > Maintenance** folders in the tree view.

The main view lists the respective devices.

ADVICE: The devices in *Maintenance* mode are always displayed in yellow.

Identifying a device by activating the Identification LED

Some devices provide an *Identification* LED on the front panel.

Use the web application to switch the device LEDs on or off in order to identify the devices in a rack, for example.

How to (de)activate the *Identification* LED of a device:

1. In the menu, click on **KVM switches**.
2. Right-click the device and click on **Identification LED > On** or **Identification LED > Off** in the context menu.

Saving and restoring the data of the KVM system

The backup function lets you save your configurations. You can reset your configurations with the restore function.

NOTE: To save and restore your configuration, you can go to **System > Tools** in the directory tree or use the **Tools icon**.

How to save the configuration of the KVM system:

1. In the directory tree, click on **System > Tools**.
2. Click **Backup**.
3. Enter the location and the name of the backup file under **Path**.

ADVICE: Use the file button to select the name and the location of the backup file via the file dialog.

4. *Optional:* Enter a **Password** to secure the backup file or a **Comment**.
5. Select the scope of data you want to back up: You can back up either the **network settings** and/or the **Application settings**.
6. Click **Backup**.

How to restore the configuration of the KVM system:

1. In the directory tree, click on **System > Tools**.
2. Click on **Restore**.
3. Enter the location and the name of the backup file under **Path**.

ADVICE: Use the file button to select the name and the location of the backup file via the file window.

4. Use the information given under **Creation date** and **Comment** to check if you selected the right backup file.
5. Select the scope of data you want to restore: You can restore either the **network settings** and/or the **Application settings**.

NOTE: If one of these options cannot be selected, the data for this option was not stored.

6. Click **Restore**.

2 KVM switches

In the web application's *KVM Switches* menu, you can configure various settings of the KVM switch and view the device's status information.

Basic configuration of KVM switches

Changing the name of a KVM switch

How to change the name of a KVM switch

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Enter the desired name of the KVM switch in the **Name** field of the **Device** section.
4. Click on **Save**.

Changing the comment of a KVM switch

The list field of the web application displays the name of a KVM switch as well as the comment entered about the device.

ADVICE: For example, use the comment field to note the location of the KVM switch.

How to change the comment of a KVM switch:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Enter any comment in the **Comment** field of the **Device** section.
4. Click on **Save**.

Deleting a KVM switch from the KVM system

If the system is not able to find a KVM switch that has previously been part of the KVM system, it assumes that the device is switched off.

If a KVM switch has been permanently removed from the system, you can manually delete it from the KVM switches list.

NOTE: Only KVM switches that have been *switched off* can be deleted.

How to delete a KVM switch that is switched off or disconnected from the system:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to delete and then click on **Delete**.
3. Confirm the confirmation prompt by clicking on **Yes** or cancel the process by clicking on **No**.

Configuration settings of KVM switches

Device configuration

Changing the hotkey to open the OSD

You can define a hotkey to open the on-screen display (OSD) for operating and configuring the system.

NOTE: By default, the hotkey to open the OSD is **Ctrl**.

The shortcut consists of at least one hotkey modifier key and an additional hotkey that you can freely select within a given frame.

You can change both the hotkey modifier key **Ctrl** and the hotkey **Num** of the shortcut.

How to change the hotkey to open the OSD:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.

3. In the **Hotkey modifier** field of the **Configuration** section, select *at least* one of the listed modifier keys by marking the corresponding check box:

<input type="checkbox"/>	Ctrl
<input type="checkbox"/>	Alt
<input type="checkbox"/>	Alt Gr
<input type="checkbox"/>	Win
<input type="checkbox"/>	Shift

4. In the **Hotkey** field, select one of the following options:

Num:	<i>Num</i> key
Pause:	<i>Pause</i> key
Insert:	<i>Insert</i> key
Delete	<i>Delete</i> key
Pos1:	<i>Pos 1</i> key
End:	<i>End</i> key
Page up:	<i>Page</i> ↑ key
Page down:	<i>Page</i> ↓ key
Space key:	Space key

5. Click on **Save**.

Starting the on-screen display by pressing a key twice

As an alternative to opening the on-screen display (OSD) with the key combination **Hotkey+Num** or **Double hotkey+Num**, you can open the OSD by pressing a specific key twice (see below).

How to enable/disable opening the on-screen display by pressing a key twice:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.

- In the **OSD via double keypress** field of the **Configuration** section, select between the following options:

Off:	Open OSD by pressing a key twice disabled. (<i>Default</i>)
Ctrl:	Open OSD by pressing the Ctrl key twice.
Alt:	Open OSD by pressing the Alt key twice.
Alt Gr:	Open OSD by pressing the Alt Gr key twice.
Win:	Open OSD by pressing the Win key twice.
Shift:	Open OSD by pressing the Space key twice.
Print:	Open OSD by pressing the Print key twice.
Arrow left	Open OSD by pressing the Arrow left key twice.
Arrow right	Open OSD by pressing the Arrow right key twice.
Arrow up	Open OSD by pressing the Arrow up key twice.
Arrow down	Open OSD by pressing the Arrow down key twice.

- Click on **Save**.

Changing the select keys

By default, the select keys 1 to 3 are active for switching between the computers connected to the KVM switch.

EXAMPLE: The default setting for switching to computer 2 is **Hotkey+2** (default: **Alt+2**).

If one of the shortcuts resulting from the select key set collides with a shortcut used in an installed application program, you can change both the select key modifier and the select keys.

How to change the select keys:

- In the menu, click on **KVM switches**.
- Click on the KVM switch you want to configure and then click on **Configuration**.
- Click on **Edit select keys** in the **Configuration** section.

4. In the **Select key modifier** field, select *at least* one of the listed modifier keys by marking the corresponding check box:

<input type="checkbox"/>	▪ Ctrl
<input type="checkbox"/>	▪ Alt
<input type="checkbox"/>	▪ Alt Gr
<input type="checkbox"/>	▪ Win
<input type="checkbox"/>	▪ Shift

5. In the **Valid select keys** field, select one of the options listed:

Only numbers:	<i>Only numerical keys are valid as select keys</i>
Only letters:	<i>Only alphabetic keys are valid as select keys</i>
Numbers and letters:	<i>Numerical and alphabetic keys are valid as select keys</i>

IMPORTANT: Both the selected valid keys and the select key modifier are *no longer* provided as shortcuts to the operating system and the applications on the target computer.

6. In the channel table, click in the **Select keys** column of a channel and then enter the desired character(s).
7. Assign the select keys of the other channels one by one as described in step 6.
8. Click on **Save**.

Selecting step keys

After activating the *Stepscan* mode (**Querverweis**), you can press a key to switch to the next or previous computer.

The **Up** and **Down** keys are set as default keys for this. You can also select a different set of keys to use for switching between computers.

How to select the keys to use with the step scan function:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.

- In the **Stepscan keys** field of the **Configuration** section, select between the following options:

Up Down:	<ul style="list-style-type: none"> Press the Up key to switch one channel up. Press the Down key to switch one channel down.
PageUp PageDown:	<ul style="list-style-type: none"> Press the PageUp key to switch one channel up. Press the PageDown key to switch one channel down.
NumUp NumDown:	<ul style="list-style-type: none"> Press the NumUp key to switch one channel up. Press the NumDown key to switch one channel down.
NumPageUp NumPageDown:	<ul style="list-style-type: none"> Press the NumPageUp key to switch one channel up. Press the NumPageDown key to switch one channel down.
Num+ Num-:	<ul style="list-style-type: none"> Press the Num+ key to switch one channel up. Press the Num- key to switch one channel down.

- Click on **Save**.

Configuring the scantime of the Autoscan or Autoskip function

By default, each automatic connection is held for 10 seconds before disconnecting and switching to the next channel.

Select a time span between 1 and 99 seconds to define how long you want to access a channel.

How to change the scantime:

- In the menu, click on **KVM switches**.
- Click on the KVM switch you want to configure and then click on **Configuration**.
- In the **Scantime** field of the **Configuration** section, enter a time span between 1 and 99 seconds.
- Click on **Save**.

Auto-switching to a channel after the start-up

After switching on the device, the last active channel is usually accessed. You can also configure that you automatically switch to a *specific* channel after the start-up of the device.

How to configure the channel to switch to after starting the device:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. In the **Enable channel after startup** field of the **Configuration** section, select between the following options:

Last channel:	After switching on the KVM switch, the last active channel is usually accessed (<i>default</i>).
Ch. 1:	After switching on the KVM switch, Channel 1 is accessed.
Ch. 2:	After switching on the KVM switch, Channel 2 is accessed.
Ch. 3:	After switching on the KVM switch, Channel 3 is accessed.

4. Click on **Save**.

Enabling/disabling switching

Switching to a specific channel can take place either via the *buttons* on the device, configured *select keys*, the *IP-Control-API*, SNMP or the web application *ConfigPanel*.

If required, you can restrict the options for switching between channels.

How to enable/disable the options for switching between channels:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.

3. In the **Disable switching** field of the **Configuration** section, select the switching options you want to block by checking the appropriate checkbox(es).

Buttons:	Switching via buttons on the front panel of the device disabled
IP-API & EasyControl:	Switching via IP-API and <i>EasyControl</i> disabled
Serial:	Switching via a serial device disabled
Hotkeys:	Switching via select keys and step keys disabled
Select key:	Switching via select keys disabled
Step/Scan Up:	Switching via step key Up disabled
Step/Scan Down:	Switching via step key Down disabled

4. Click on **Save**.

Changing the scancode sets of a PS/2 keyboard

When a key on the PS/2 keyboard is pressed, the keyboard processor sends a data packet called scancode. There are two common scancode sets (sets 2 and 3) that contain different scancodes.

By default, the KVM switch interprets all entries of a PS/2 keyboard with scancode set 2.

ADVICE: If the pipe ("|") cannot be entered or the arrow keys of the keyboard do not work as expected, it is recommended to switch to scan code set 3.

How to change the setting of the scancode set:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.

3. In the **Scancode set** field of the **Configuration** section, select between the following options:

Set 2: Activates scancode set 2 for PS/2 keyboard inputs
Set 3: Activates scancode set 3 for PS/2 keyboard inputs

4. Click on **Save**.
5. Restart the KVM switch.

NOTE: After a restart, the keyboard is initialised and the selected scancode set is applied.

Enabling/disabling DDC/CI support

The KVM switch has been prepared to support monitors with **DDC/CI** function. After the function has been activated, the **DDC/CI** information is transparently forwarded to the monitor to support as many monitors as possible.

NOTE: Support cannot be guaranteed for all monitors.

How to configure the DDC/CI transmission:

NOTE: The **DDC/CI** transmission is set separately for each video channel of the KVM switch. For multichannel devices, the following option can be set separately for each video channel.

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. In the **DDC/CI monitor** field of the **Configuration** section, select between the following options:

Disabled:	The transmission of DDC/CI signals is disabled. (<i>default</i>)
CPU > Monitor:	The transmission of DDC/CI signals is exclusively carried out from computer to monitor.
Bidirectional:	The transmission of DDC/CI signals is bidirectional.

4. Click on **Save**.

OSD configuration

Enabling/disabling the use of the on-screen display

Use this function to select whether users of the KVM switch are allowed to access and use the on-screen display (OSD).

How to enable/disable the use of the on-screen display:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. In the **Block OSD menu** field of the **OSD configuration** section, select between the following options:

No:	On-screen display available (<i>default</i>)
Yes:	On-screen display blocked

4. Click on **Save**.

Enable/disable an automatic OSD timeout

In the default settings of the KVM switch, the OSD is displayed until the user switches to another channel or closes the OSD.

You can also specify a time period after which the OSD is closed automatically.

How to enable/disable an automatic OSD timeout:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. In the **Timeout OSD session** field of the **OSD configuration** section, enter a time span between **5** and **99** seconds.

NOTE: Entering the value **0** disables the automatic timeout.

4. Click on **Save**.

Setting the OSD resolution

In the default settings of the KVM switch, the OSD is displayed on the desktop monitor with a resolution of 1024 × 768 pixels if the monitor supports this resolution. If the monitor does not support this resolution, it uses a resolution of 640 × 480 pixels.

You can also choose a fixed OSD resolution (see table below).

How to adjust the OSD resolution:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. In the **OSD resolution** field of the **OSD configuration** section, select between the following options:

Auto:	If supported by the monitor, the OSD is displayed with a resolution of 1024 × 768 pixels. If the monitor does not support this resolution, it uses a resolution of 640 × 480 pixels (<i>default</i>).
640 × 480/60:	Display OSD with a resolution of 640 × 480 pixels
720 × 400/70:	Display OSD with a resolution of 720 × 400 pixels
1024 × 768/60:	Display OSD with a resolution of 1024 × 768 pixels

4. Click on **Save**.

Selecting the keyboard layout for inputs on the on-screen display

If the characters displayed on the screen are different from the characters entered on the keyboard of the workstation, the selected keyboard layout is not correct.

In this case, find out the keyboard layout of the connected keyboard and then select it in the settings of the KVM switch.

How to select the keyboard layout of the workstation keyboard:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.

- In the **OSD keyboard layout** field of the **OSD configuration** section, select between the following options:

German:	German (Germany)
English (USA):	English (USA)
English (United Kingdom):	English (United Kingdom)
French:	French (France)
Spanish:	Spanish (Spain)
Lat. American	Spanish (Latin America)
Portuguese:	Portuguese (Portugal)

- Click on **Save**.

Adjusting the transparency of the on-screen display

By default, the on-screen display (OSD) is displayed with medium transparency on top of the screen contents. The part of the screen that is covered by the OSD shines through the OSD.

You can adjust or disable the transparency level.

How to adjust the transparency level of the on-screen display:

- In the menu, click on **KVM switches**.
- Click on the KVM switch you want to configure and then click on **Configuration**.
- In the **OSD transparency** field of the **OSD configuration** section, select between the following options:

High:	High transparency of screen contents
Average:	Average transparency of the screen contents (<i>default</i>)
Low:	Low transparency of screen contents
Off:	On-screen display covers screen contents

- Click on **Save**.

Displaying an information overlay

By default, a temporary (5 seconds) information overlay is displayed when switching to a channel. The overlay on the workstation monitor informs you about the names of the channel and the KVM switch and contains further information if available.

You can also set the information overlay to permanent or switch it off.

ADVICE: If the temporary information overlay is active, you can show the information at any time by pressing the key combination **Ctrl+Caps Lock key**.

How to change the setting of the information overlay:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. In the **Show OSD info** field of the **OSD configuration** section, select between the following options:

High:	High transparency of screen contents
Average:	Average transparency of the screen contents (<i>default</i>)
Low:	Low transparency of screen contents
Off:	On-screen display covers screen contents

4. Click on **Save**.

Changing the colour of the information overlay

By default, information overlays (e. g. when switching to a channel) are displayed in light green. The colour of the overlay can be adjusted.

How to change the colour of the information overlay:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.

- In the **OSD info colour** field of the **OSD configuration** section, select between the following options:

Light green:	Display information overlay in light green (<i>default</i>)
Black, dark red, green, dark yellow, dark blue, dark blue, violet, dark turquoise, silver, yellow, blue, magenta, light turquoise, white	Display information overlays in the selected colour.

- Click on **Save**.

Channel configuration

Changing the channel name

How to change the channel name:

- In the menu, click on **KVM switches**.
- Click on the KVM switch you want to configure and then click on **Configuration**.
- Click on the tab **Channels**.
- Click on the channel you want to configure and then click on **Configuration**.
- Enter the channel name in the **Name** field of the **Channel** section.
- Click on **Save**.

Changing the comment of a KVM switch

How to change the comment of a channel:

- In the menu, click on **KVM switches**.
- Click on the KVM switch you want to configure and then click on **Configuration**.
- Click on the tab **Channels**.
- Click on the channel you want to configure and then click on **Configuration**.
- Enter any comment in the **Comment** field of the **Channel** section.
- Click on **Save**.

Enabling/disabling a channel

You can connect up to three computers to the KVM switch. The workstation set up on the device can switch to these channels.

If less than three computers are connected to the KVM switch, you can disable the unused channels. This prevents unnecessary switching and the evaluation of monitoring data.

How to enable/disable a channel:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on the tab **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.
5. Mark the **Channel activated** check box of the **Channel** section to allow switching to this channel, or clear this check box to prohibit switching to this channel.
6. Click on **Save**.

Enabling/disabling the keyboard signal

By default, the signals of keyboard and mouse connected to the workstation are transmitted to the computer of the connected channel.

In the settings of the KVM switch, you can enable or disable the transmission of the keyboard signal for each channel.

How to enable/disable the transmission of the keyboard signal of a channel:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on the tab **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.

5. In the **Keyboard enabled** field of the desired channel, select between the following options:

Enabled:	Keyboard signals are transmitted to the computer of this channel (<i>default</i>).
Disabled:	Keyboard signals are <i>not</i> transmitted to the computer of this channel.

6. Click on **Save**.

Support for multimedia and other special keys

Several manufacturers have added additional keys to standard keyboards.

Thus, some USB keyboards are equipped with special multimedia keys that enable the convenient operation of the computer's special multimedia functions. For example, the *Apple Mac mini*'s keyboard is equipped with a button to open the DVD drive.

How to enable/disable the support for multimedia and other special keys

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.
5. In the **USB keymode** of the desired channel, select between the following options:

PC Standard:	Standard keymode
PC Multimedia:	Support for special multimedia keys
Apple A1243:	Keymode for Apple computers
LK463:	LK463-compatible keyboard

6. Click on **Save**.

Video channel configuration

NOTE: If you have purchased a multichannel version of the KVM switch, the configuration settings described in this section are available separately for each multichannel channel.

Changing the name of a video channel

How to change the name of a video channel

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on the tab **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.
5. Enter the channel name in the **Video channel** field of the **Video channel** section.
6. Click on **Save**.

Changing the comment of a video channel

How to change the comment of a video channel:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on the tab **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.
5. Enter any comment in the **Comment** field of the **Video channel** section.
6. Click on **Save**.

Reading the EDID profile of a monitor

The EDID information (*Extended Display Identification Data*) of a monitor informs the graphics card of the connected computer about various technical features of the device. The KVM switch usually forwards this information unaltered via Enhanced-DDC (*Enhanced Display Data Channel*) to the computer.

The EDID profile of a monitor can also be read in and transmitted to one (or more) of the connected computers via the KVM switch.

NOTE: An EDID profile can be read in either directly from a monitor connected to the KVM switch or from a bin file.

How to read in the EDID profile of a connected monitor:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.
5. Click on **New EDID profile** in the **Video channel** section.
6. Click in the **Learn** list box and select the monitor whose EDID information you want to read in.

NOTE: The **Name** and **Comment** fields of the profile are automatically prefilled and the contents of the EDID information are displayed.

7. Click on **Ok**.
8. If desired, change the information in the fields **Name** and/or **Comment**.
9. Click on **Save**.

How to import the EDID profile of a monitor from a file:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.
5. Click on **New EDID profile** in the paragraph **Video channel**.
6. Click on **Search**.
7. Select the bin file to be imported from the file dialog and click on **Open**.

NOTE: The **Name** and **Comment** fields of the profile are automatically prefilled and the contents of the EDID information are displayed.

8. If desired, change the information in the fields **Name** and/or **Comment**.
9. Click on **Save**.

Defining the EDID profile of a channel

How to select the EDID profile:

ADVICE: If you want to apply an EDID profile to the *same* video channels of the other channels, click the **All** button.

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.
5. In the **EDID profile** field of the **Video channel** section, select between the following options:

[Auto]:	Automatic handling of EDID data (default)
Profile name:	Selection of an EDID profile previously imported by a user

6. Click on **Save**.

Use of the Freeze mode

If the cable connection between the computer and the KVM switch is interrupted during operation, no image is displayed on the workstation monitor (*default*).

Activate the Freeze mode if you want to display the last image received at the KVM switch until the connection is restored in case of a disconnection.

ADVICE: In order to clearly signal the disconnection, the last received image is optionally displayed with a coloured frame and/or the time since the disconnection.

How to configure the setting of the Freeze mode:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on **Channels**.
4. Click on the channel you want to configure and then click on **Configuration**.
5. In the **Freeze mode** field of the **Video channel** section, select between the following options:

Off:	Show no image if the connection is lost (default).
On OSD timer + frame	Show the last image after disconnection. The disconnection is indicated by the display of the time since the disconnection and a coloured frame.
On OSD timer	Show the last image after disconnection. The disconnection is indicated by the display of the time since the disconnection.
On Frame	Show the last image after disconnection. The disconnection is indicated by a coloured frame.

6. Click on **Save**.

Advanced features for KVM switches

Switching between channels

Switching to one of the computers connected to the KVM switch can also be carried out via the web application instead of the buttons on the device and the configured select keys.

Keyboard and mouse inputs as well as the data stream of any USB devices connected to the KVM switch and the incoming audio signal are immediately routed to the active computer after switching.

How to switch the signal transmission to a computer:

1. In the menu, click on **KVM switches**.
2. Select the KVM switch you want to switch.
3. Click on **Switch**.
4. Click on the channel you want to access (e. g. **CPU_3**).

NOTE: The **OK** mark behind the channel name indicates the active channel. A separate window informs you if the switching cannot be executed.

Configuring monitoring values

In the *Monitoring* section, you can define values to be monitored and check the status of these values.

Selecting the values to be monitored

By default, the KVM system monitors a variety of different values of the KVM switch.

If required, you can limit the evaluation and monitoring of properties.

How to manage the values to be monitored:

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on **Monitoring**.
4. Enable or disable individual monitoring values by sliding the slider to the *left* (**off**) or to the *right* (**on**).

NOTE: In order to enable or disable *all* values you can use the check box in the header of the **Enabled** column.

5. Click on **Save**.

Viewing the status information of a KVM switch

Using the configuration menu of a KVM switch, you can open a window displaying different KVM switch status information.

How to display the status information of a KVM switch

1. In the menu, click on **KVM switches**.
2. Click on the KVM switch you want to configure and then click on **Configuration**.
3. Click on **Information**.
4. The following information is displayed in the dialog box that opens now:


KVM switch	
Name:	Name of the KVM switch
Device ID:	Physical ID of the KVM switch
Status:	Current status (online or offline) of the KVM switch
Class:	Device class of the KVM switch
Comment:	Comment about the KVM switch entered by the user
Hardware information	
Firmware name:	Firmware name
MAC A:	MAC address of <i>Network A</i> interface
MAC B:	MAC address of <i>Network B</i> interface
Firmware revision:	Firmware version
Serial number	Serial number of the KVM switch
FPGA1 revision:	FPGA1 revision
Hardware revision:	Hardware revision
IP address A:	IP address of <i>Network A</i> interface
IP address B:	IP address of <i>Network B</i> interface
Active features	
This area lists all activated additional functions.	

Link status	
Link detected:	Connection to the network established (yes) or interrupted (no).
Auto-negotiation:	Transmission speed and duplex mode have been configured automatically (yes) or manually by the administrator(no).
Speed:	Transmission speed
Duplex	Duplex mode (full or half)


NOTE: In addition, the *monitoring* information of the device is displayed.

5. Click on **Close** to close the window.


NOTES

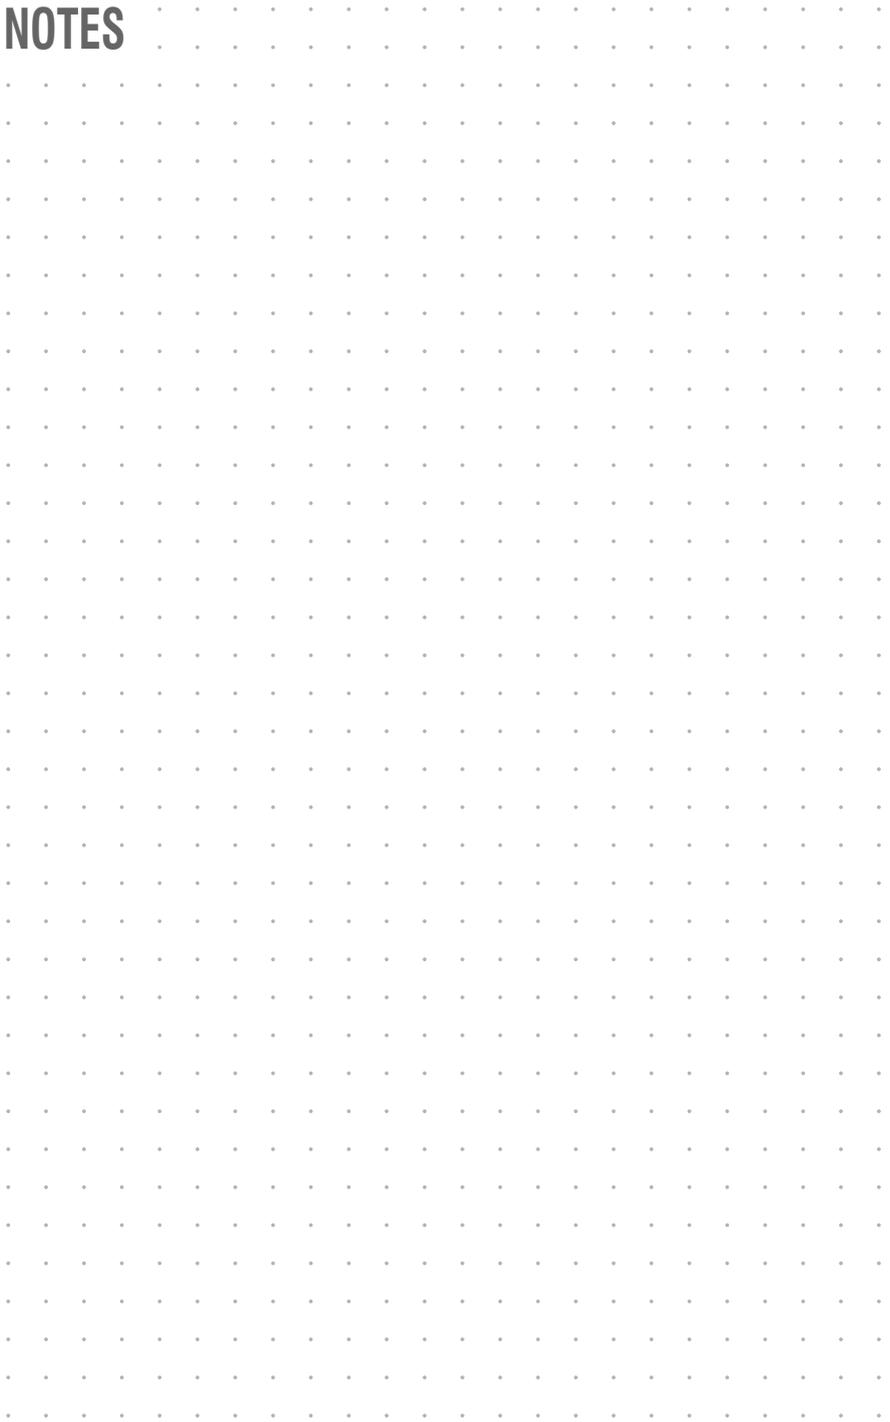


NOTES

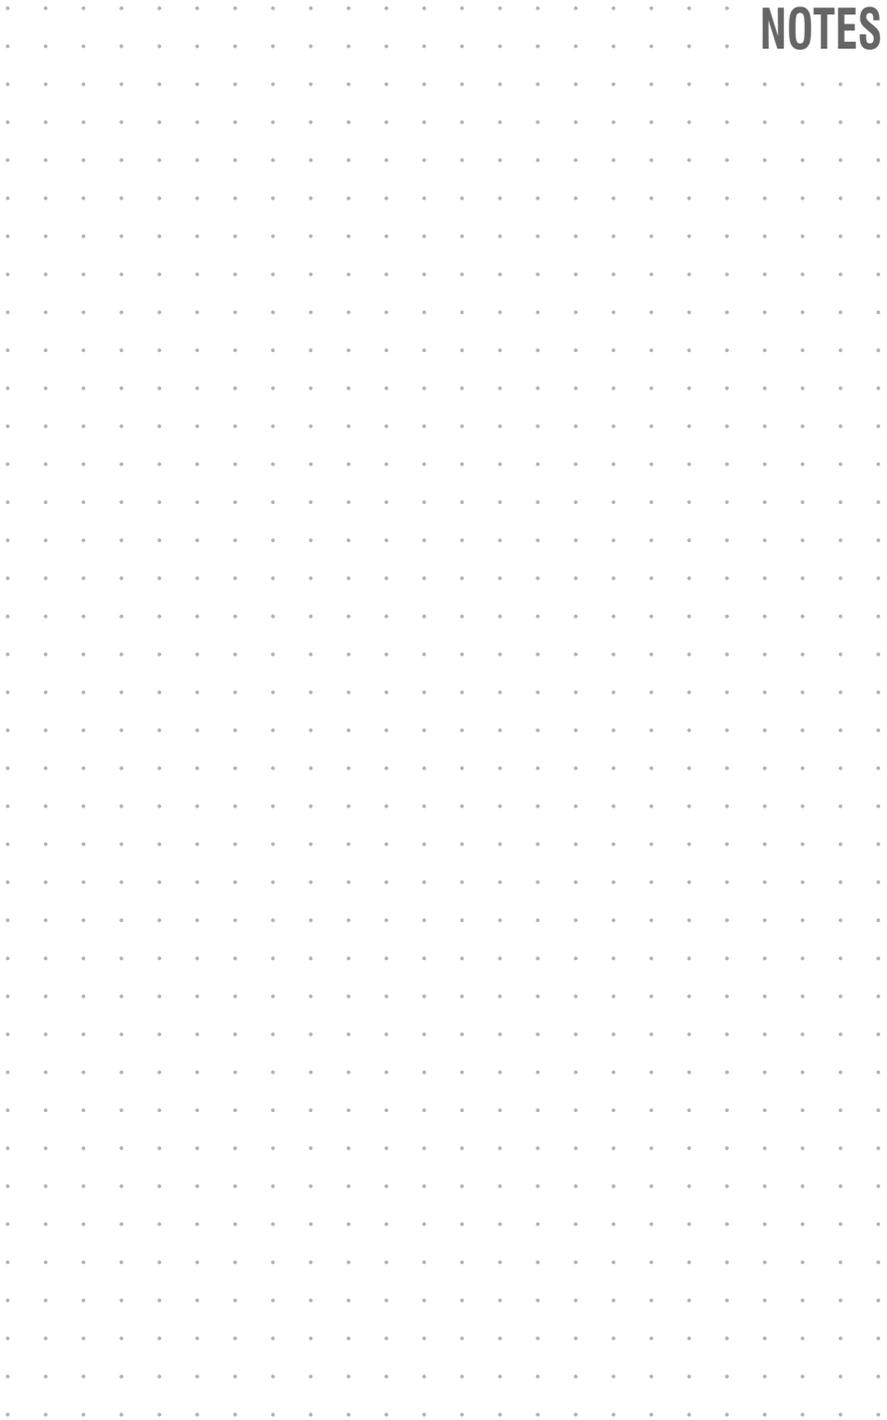

NOTES

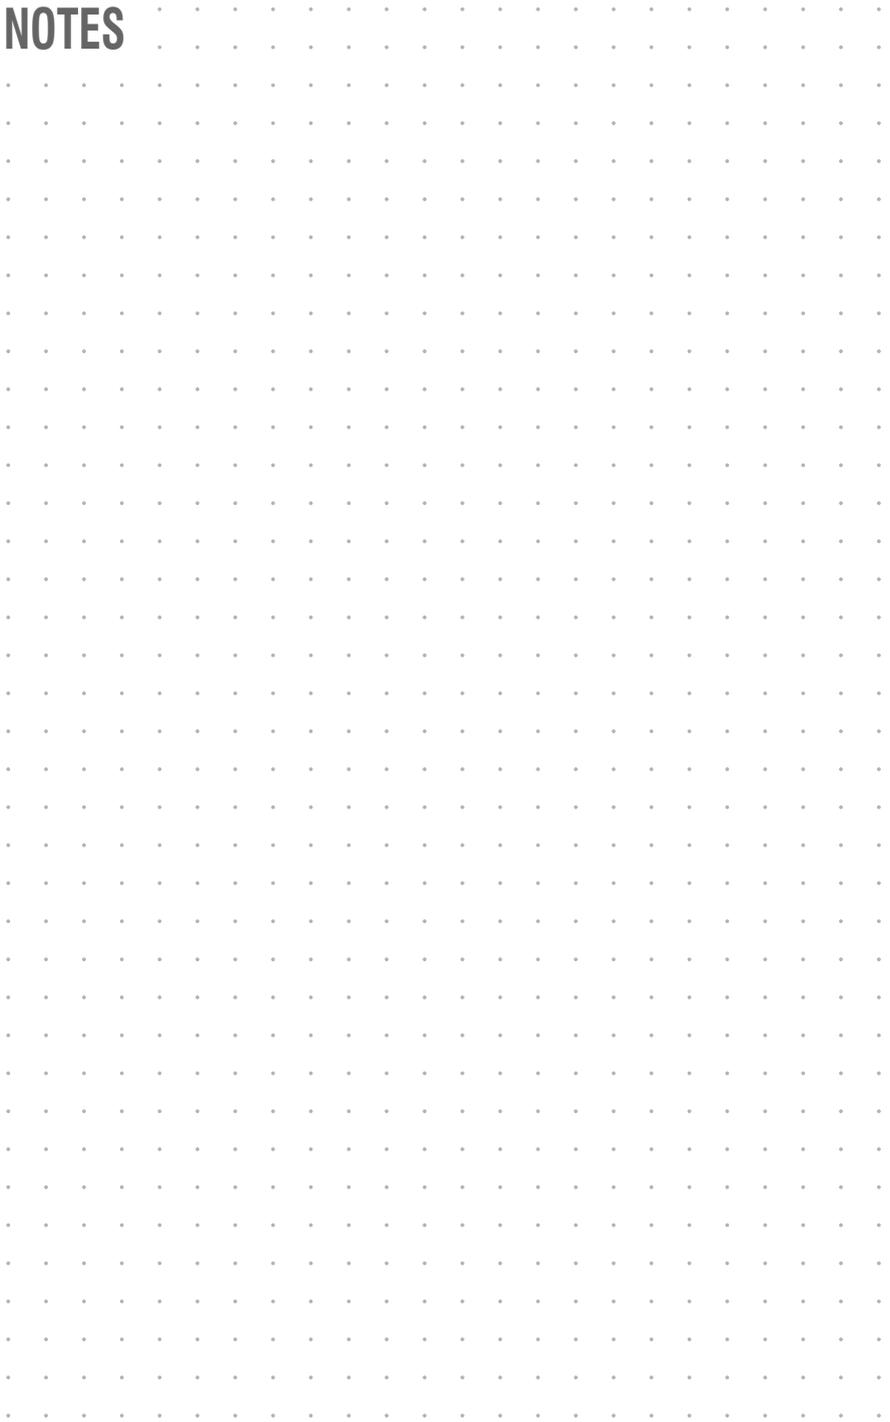

NOTES

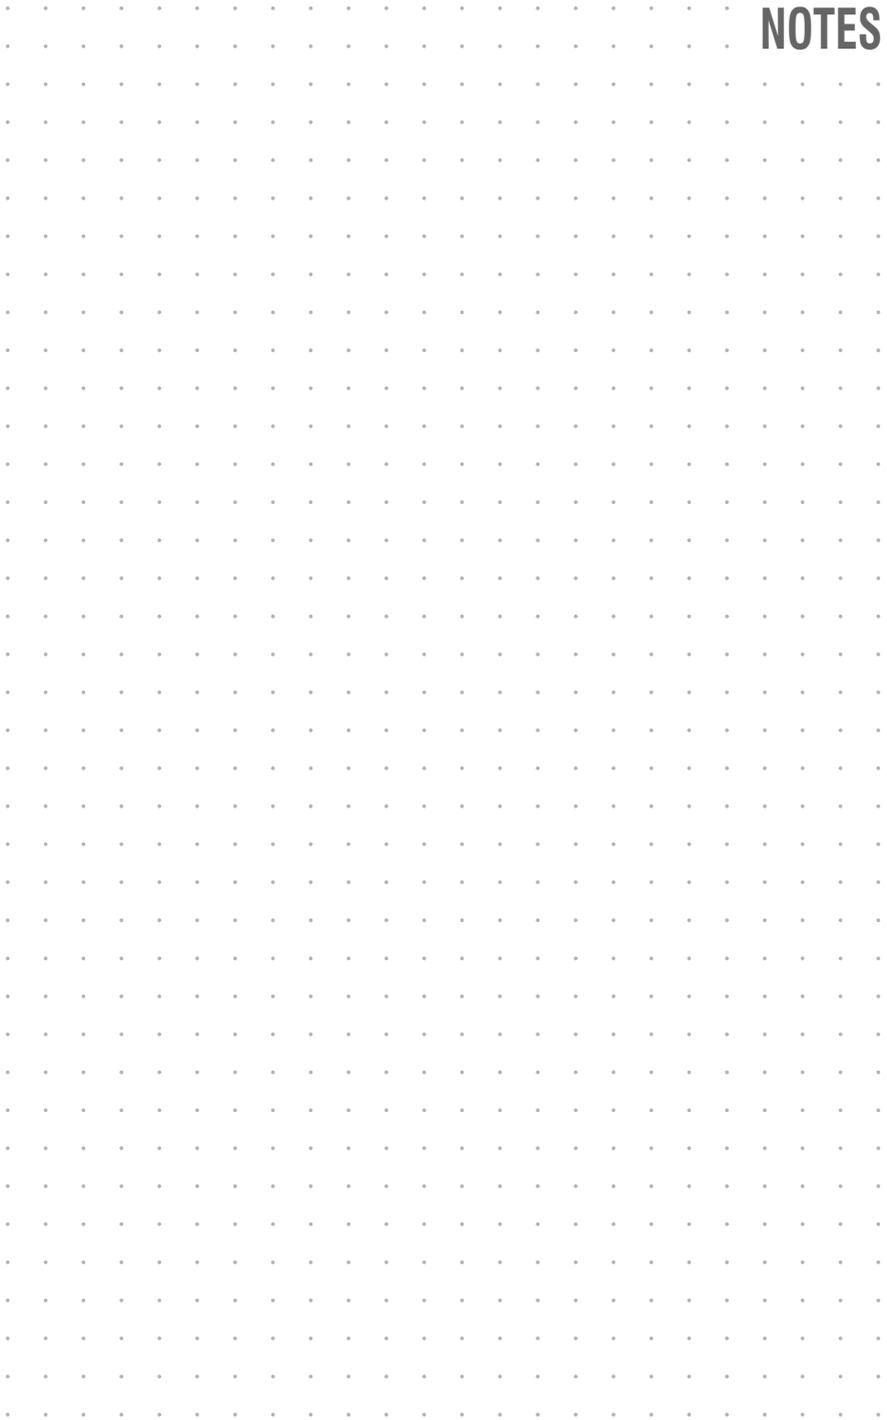



The manual is constantly updated and available on our website.

<http://gdsys.de/A9200148>

Guntermann & Drunck GmbH

Obere Leimbach 9
57074 Siegen

Germany

<http://www.gdsys.de>
sales@gdsys.de